


# Installing Lights

- Relax don't rush for a better install.
- Measure twice before drilling, check behind to avoid damage.
- Use the light bracket to mark the location of the 1/4" screw holes. Do not over-tighten.
- Run the wires above the cart's frame — NOT below.

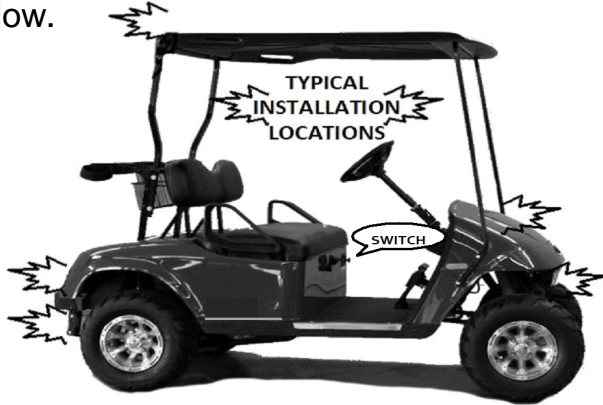

7-Day Live Phone Support

1-352-264-7877

Email: [tecscan@tecscan.com](mailto:tecscan@tecscan.com)

See Videos & Instructions

4

## Standard Kit Instructions

Please do not guess if something will work.


If in doubt, **CALL BEFORE YOU INSTALL!**

1-352-264-7877 or email: [tecscan@tecscan.com](mailto:tecscan@tecscan.com)

**HEADLIGHT LOOKS YELLOW TAILLIGHT LOOKS WHITE**


**Video Instructions** <https://store.tecscan.com/>

- a) Drill a 1/2" switch tent wire hole driver's side of center **ABOUT 3"** below the seat edge
- b) Check clearance from the battery compartment before drilling a .5" hole
- c) Put the plug through the hole first, then the 2

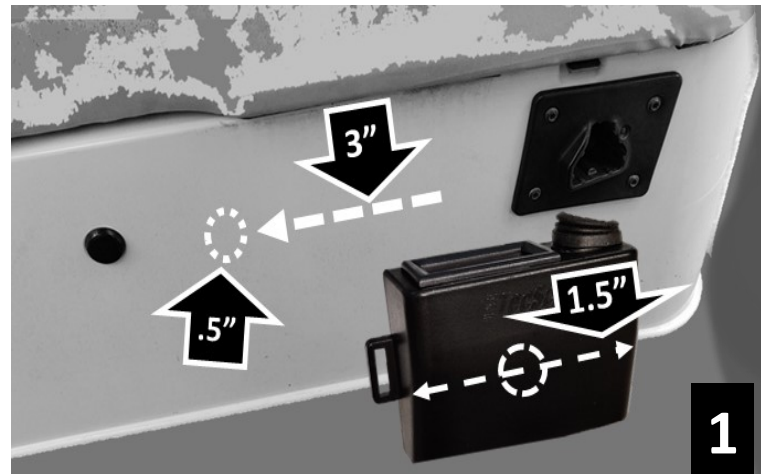

1

1. Connect FUSE to RED wire from Switch/Tent
2. Attach wires with rings RED to FUSE – BLACK to BLACK wire.
3. Select two 6v or two 8v batteries linked together. Attach RED to POS and BLACK to NEG. DO NOT USE LINK POSTS! See diagram below.

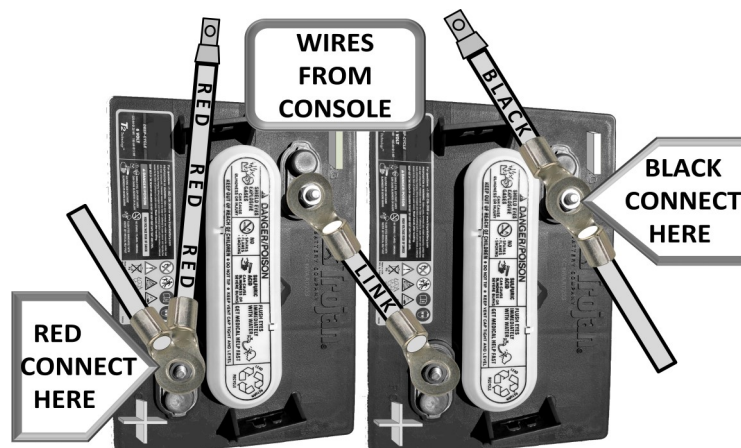


### NOTICE REDUCER OPTIONAL

If you choose to use a voltage reducer, use VOLTSeasy only. No warranty on other brands. Follow the reducer instructions.


2

1. Use **button** on the underside of meter to change setting to match the **combined voltage** of the **two** batteries used, 12v, 16v, or 18v.

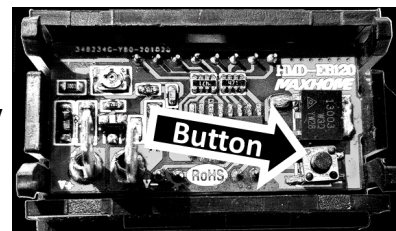

**Long press**, voltage blinks.  
**Short press** cycles through 12v, 16v and 18v.

**Long press** again

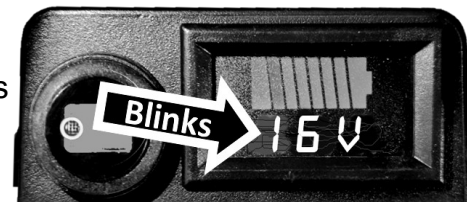

2. Only if meter reads 20v or less, screw the Tent to the cart. Now OK to connect lights.



### STATE OF CHARGE METER

- Reading is the average of the 2 batteries it is connected to, only.
- The state of the other batteries should be the same or slightly higher.

3